




1. Operate fan in speed used for heat or cool.



2. Record the supply static pressure.

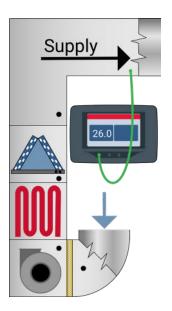

3. Remove filter and install duct blaster. Ensure there is no bypass around duct blaster.

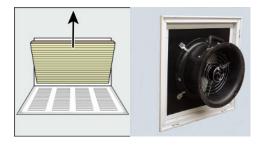

4. Turn on system and (if necessary) the Duct Blaster to match previous measured supply static. Record the flow through a two-channel manometer once pressure is matched.

